

**SENA**



**M1**

**SMART MOUNTAIN BIKE HELMET**

**USER'S GUIDE**

# TABLE OF CONTENTS

<b>1.</b>	<b>ABOUT THE M1 SMART MOUNTAIN BIKE HELMET</b>	<b>5</b>
1.1	General Information	5
1.2	Product Details	6
1.3	Package Contents	6
1.4	Wearing the Helmet	7
1.4.1	How to Wear The Helmet	7
1.4.2	Helmet Fitment Check	9
<b>2.</b>	<b>GETTING STARTED: BLUETOOTH SYSTEM</b>	<b>10</b>
2.1	Downloadable Sena Software	10
2.1.1	Sena Utility App	10
2.1.2	Sena Device Manager	10
2.2	Button Function	11
2.3	Powering On and Off	11
2.4	Charging	11
2.5	Checking the Battery Level	12
2.6	Volume Adjustment	12
<b>3.</b>	<b>PAIRING THE BLUETOOTH SYSTEM WITH OTHER BLUETOOTH DEVICES</b>	<b>13</b>
3.1	Phone Pairing	13
3.1.1	Initially Pairing the M1	13
3.1.2	Pairing When the M1 is Turned Off	14
3.1.3	Pairing When the M1 is Turned On	14
3.2	Second Mobile Phone Pairing - Second Mobile Phone and GPS	15
<b>4.</b>	<b>MOBILE PHONE USAGE</b>	<b>16</b>
4.1	Making and Answering Calls	16

<b>5.</b>	<b>STEREO MUSIC</b>	<b>17</b>
5.1	Bluetooth Stereo Music	17
<b>6.</b>	<b>BLUETOOTH INTERCOM</b>	<b>18</b>
6.1	Intercom Pairing	18
6.1.1	Using the Smart Intercom Pairing (SIP)	18
6.1.2	Using the Button	19
6.2	Two-Way Intercom	20
6.2.1	HD Intercom	20
6.3	Multi-Way Intercom	21
6.3.1	Starting a Three-Way Intercom Conference	21
6.3.2	Starting a Four-Way Intercom Conference	21
6.3.3	Ending Multi-Way Intercom	22
6.4	Three-Way Conference Phone Call with Intercom Users	22
6.5	Group Intercom	22
6.6	Universal Intercom	23
<b>7.</b>	<b>USING THE FM RADIO</b>	<b>24</b>
7.1	FM Radio On/Off	24
7.2	Navigating Preset Stations	24
7.3	Seek and Save Radio Stations	24
7.4	Scan and Save Radio Stations	24
7.5	Temporary Station Preset	25
7.6	Region Selection	25
<b>8.</b>	<b>LED TAILLIGHT</b>	<b>26</b>
8.1	Using the SENA Button	26

<b>9. FUNCTION PRIORITY AND FIRMWARE UPGRADES</b>	<b>27</b>
9.1 Function Priority	27
9.2 Firmware Upgrades	27
<b>10. CONFIGURATION SETTING</b>	<b>28</b>
10.1 Bluetooth System Configuration Menu	28
10.2 Software Configuration Setting	29
10.2.1 Unit Language	29
10.2.2 Voice Prompt (Default: Enable)	29
10.2.3 RDS AF Setting (Default: Disable)	29
10.2.4 FM Station Guide (Default: Enable)	29
10.2.5 Sidetone (Default: Disable)	29
10.2.6 Advanced Noise Control™ (Always on)	29
<b>11. TROUBLESHOOTING</b>	<b>30</b>
11.1 Fault Reset	30
11.2 Factory Reset	30
<b>12. MAINTENANCE AND CARE</b>	<b>31</b>



# 1. ABOUT THE M1 SMART MOUNTAIN BIKE HELMET

## 1.1 General Information


This product is a mountain bike helmet. Do not use it for any other purpose than riding a bicycle. If you use the helmet for anything else, it may not provide sufficient protection in an accident.

Sena recommends that you choose a helmet which provides the most coverage, as a helmet that covers more of your head may provide additional protection. Always wear your mountain bike helmet low in the front to protect the forehead, as this area is most likely to be impacted in a bicycle crash. Make sure the helmet fits comfortably and is tightly fastened at all times.


### **WARNING**

- Your helmet will not protect against injury in all types of accidents. Even while wearing a helmet, low speed accidents may result in serious head injury or death. A mountain bike helmet will not protect against injuries to the spine, neck or face. In the event of any impact, do not use this helmet. There may be damage invisible to you, which may reduce the ability of the helmet to reduce the harmful effects of a blow to the head. Such helmet should be returned to Sena for inspection, or destroyed and replaced.
- Do not modify or remove any original part of the helmet. Do not use heat damaged helmets. Heat damaged helmets will appear to have uneven or have bubbly surfaces.
- This User's Guide and the stickers inside your helmet contain many instructions and warnings about your helmet. It is important for you to understand everything communicated in them before your first ride. If you do not, please contact your authorized Sena Retailer with any questions you may have. Failure to follow any of the provided instructions or warnings could void your warranty, and most importantly, could result in severe personal injury or death. If you are a parent or guardian and this helmet is for your child, please take the time to read this manual as you should make sure your child understands everything in this User's Guide.

## 1.2 Product Details

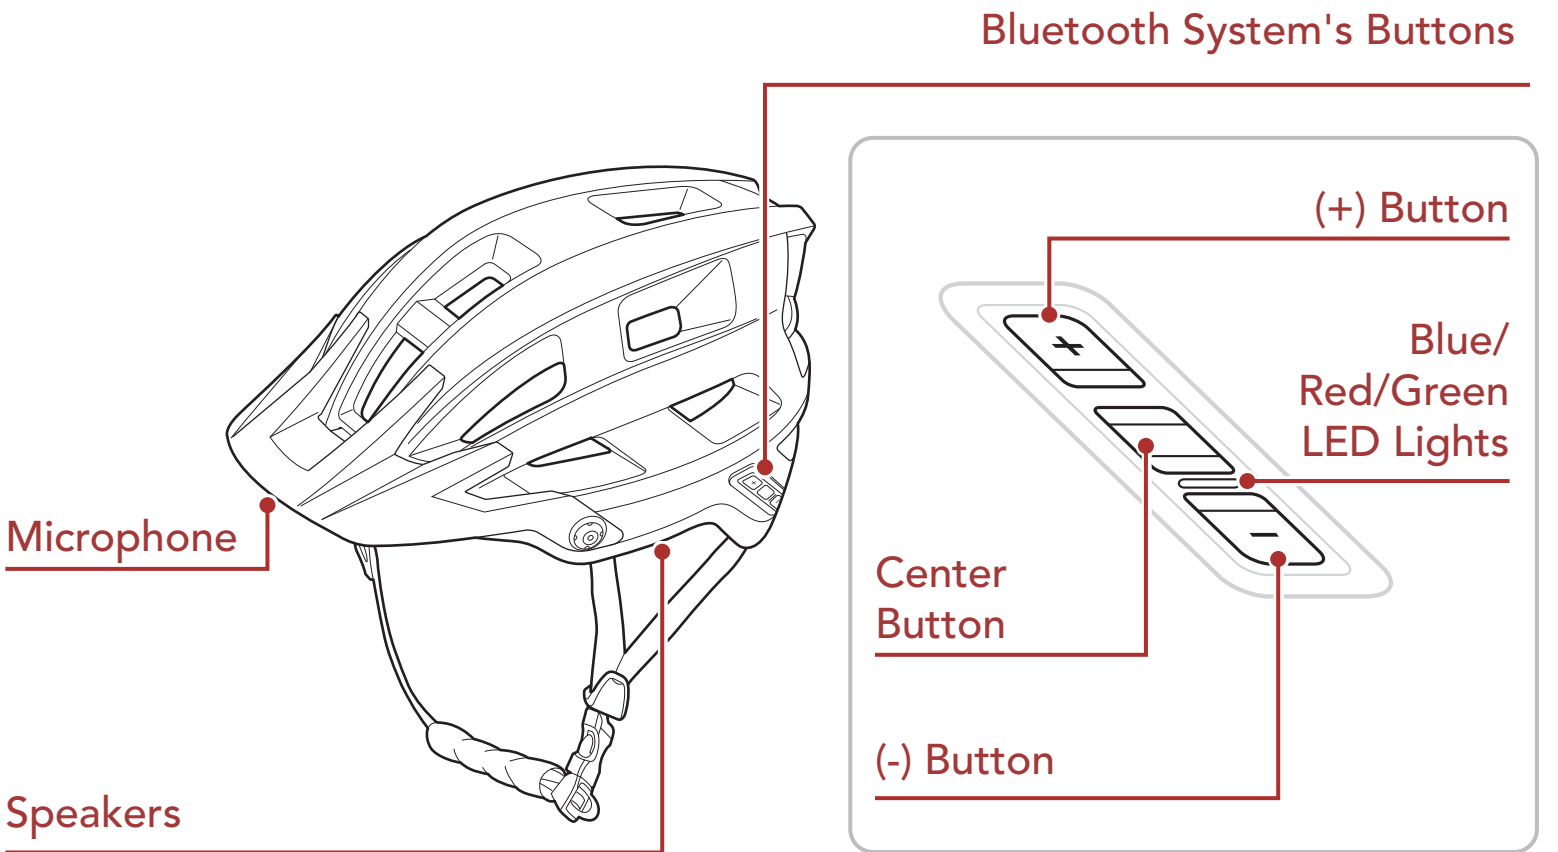

### SENA Button

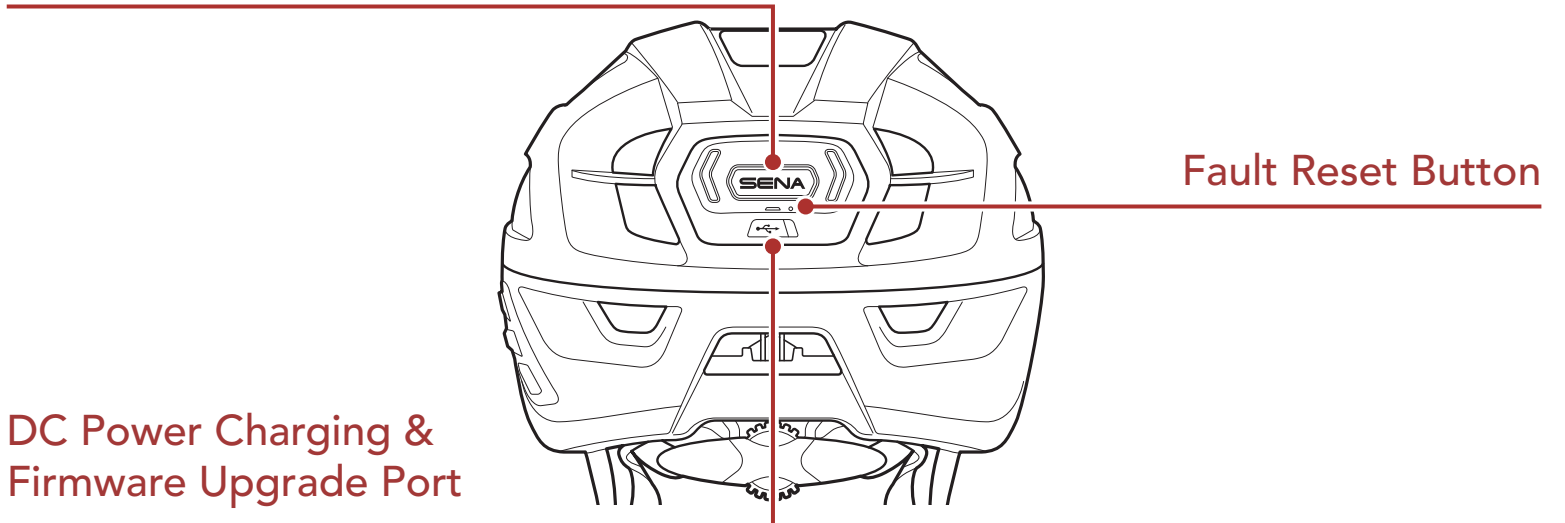

### DC Power Charging & Firmware Upgrade Port

## 1.3 Package Contents



M1 Helmet



USB Power & Data Cable



Helmet Pouch


## 1.4 Wearing the Helmet

### 1.4.1 How to Wear The Helmet

For proper use, the helmet must sit level on the head and low on the forehead. The Sena helmet uses a simple, quick-release buckle system that, once adjusted, can be buckled and unbuckled without changing the adjustment. For proper use, the straps must be tight and evenly tensioned.

To properly wear your helmet:

1. Position the helmet on your head with the front covering your forehead. If the helmet is tipped back and is not covering your forehead then the helmet is not in the proper position.
2. Position the strap adjuster centered, just below your ears.

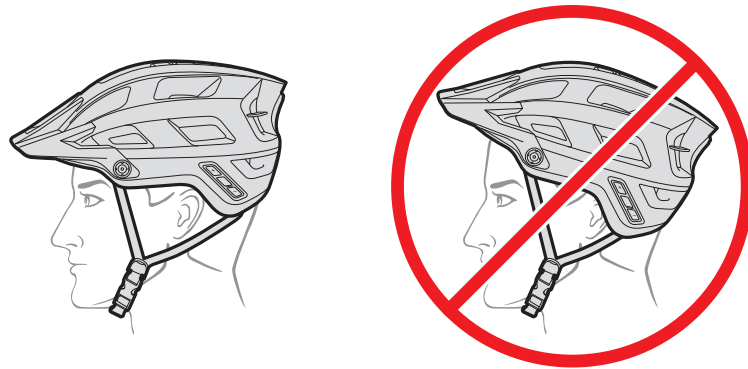


**⚠ WARNING:** Always wear the helmet in the proper position on your head with the front of the helmet covering your forehead for maximum protection. Never wear the helmet tipped back as the helmet will be in the improper position causing your forehead to be exposed. All fitment adjustments need to be made with the helmet in the proper position.


3. Position the helmet low on your forehead with the buckle under the chin and back against the throat. The straps should fit comfortably around both ears.
4. After removing the chinstrap pad, adjust the chinstrap tension at the buckle with the strap adjuster in the proper position. Adjust the tension so the chinstrap is tight and comfortable by pulling the chinstrap end through the buckle to either tighten or loosen as needed.

Chinstrap Pad

Buckle

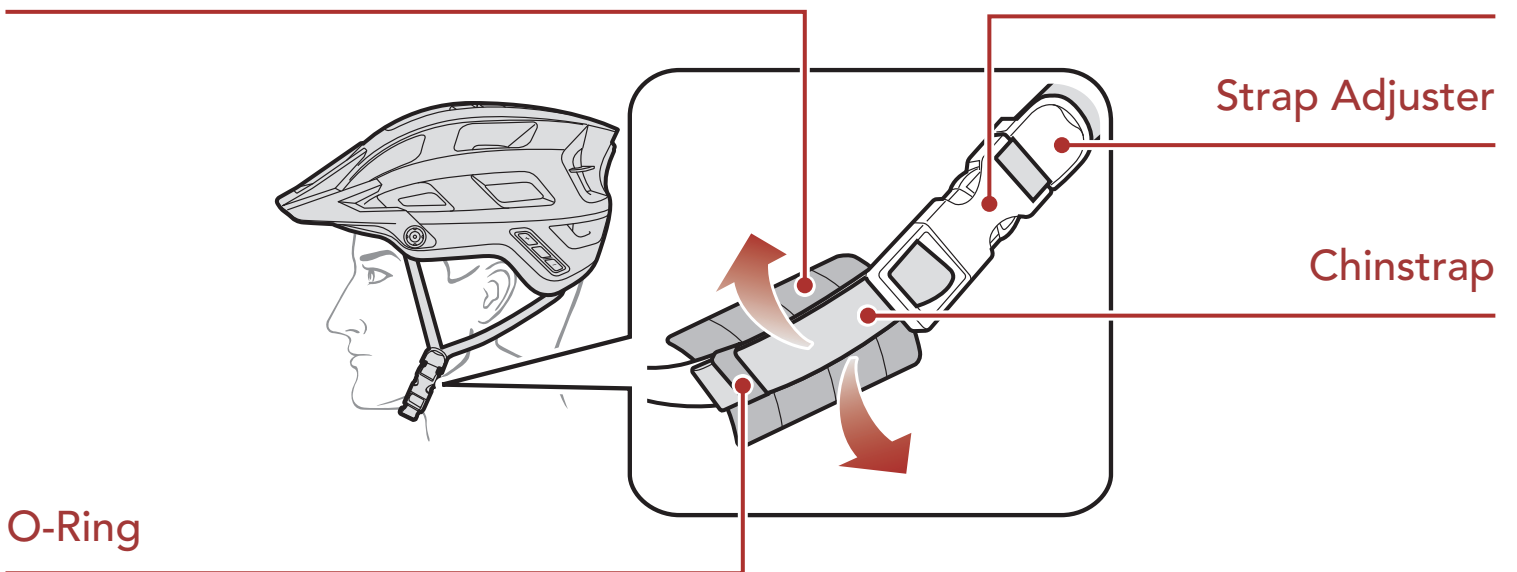


5. Secure the excess strap with O-ring and then attach the chinstrap pad. Always wear the helmet with the chinstrap buckle fastened and the chinstrap pulled tight and positioned back against the throat. With the strap buckled and the helmet positioned, you should feel the chinstrap pull firmly against your chin as you open your mouth. When properly adjusted the helmet will wrap around your head and cradle it with firm, but comfortable pressure.

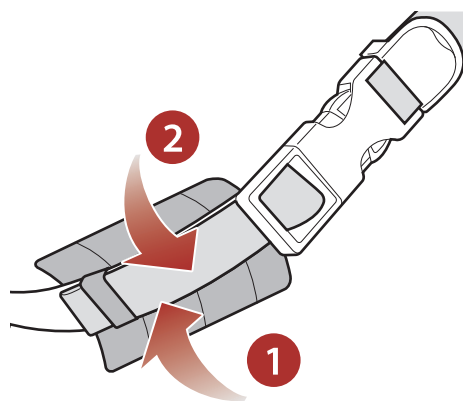


6. Your helmet is equipped with an adjustable retention system which helps stabilize the helmet in the correct position when you ride. When wearing the helmet, turn the retention system knob clockwise to tighten the helmet or counterclockwise to loosen the helmet.

7. To change the height of the retention system, firmly pull or push the retention system upward or downward to a different position.

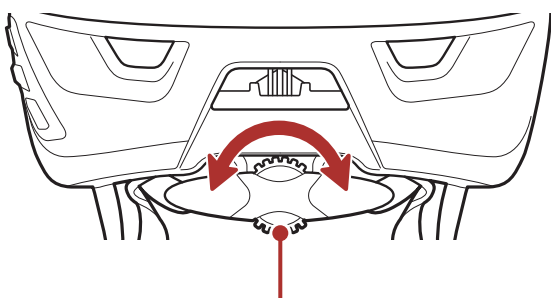

Retention System Knob

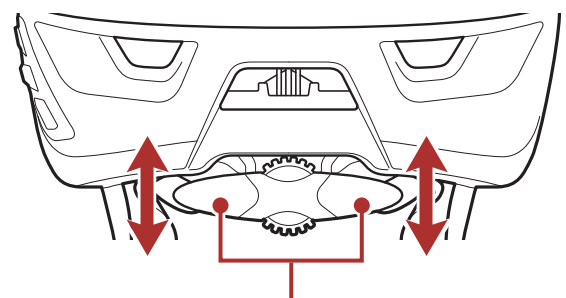

Retention System

**⚠ WARNING:** For maximum protection, this helmet must be fitted and attached properly to the wearer's head in accordance with the following instructions. If after adjustment the helmet does not fit properly, do not use the helmet. Return it to the retailer or Sena.

## 1.4.2 Helmet Fitment Check

With the retention system knob turned clockwise until comfortably tight and the chinstrap buckled under the chin and back against the throat, grab the helmet with both hands and try to remove it by rolling the helmet forward and backward as far as you can. This is an important test to ensure that the helmet fits correctly. When you do this, you should feel the chinstrap pull against the underside of your chin and the helmet will resist any movement. If this isn't the case, tighten the chinstrap and try it again until this happens. If you cannot achieve the proper fit, **DO NOT USE THIS HELMET**. Replace it with a different size until the correct fit is achieved.

Also, for a proper **Helmet Fitment Check** if you can roll the helmet forward such that it blocks your vision or if you can roll the helmet backwards such that your forehead is not covered, tighten the chinstrap and the retention system and try again until you cannot roll the helmet forward or backwards.

### **WARNING**

- Do not wear anything underneath your helmet, such as a cap, hood, bundled hair, headphones, or barrettes, as the helmet may loosen or come off. Do not wear anyone else's helmet and don't loan your helmet to anyone else.
- Always make sure the buckle is properly fastened before you ride. Failure to follow this instruction could result in serious personal injury, as the helmet may not stay in position while riding or during a fall. For proper use, make sure the loose end of the chinstrap is tucked through the rubber "O" ring.
- Check for proper fit and adjustment often, including each time you wear it, and periodically during use.
- This helmet has been designed for recreational bicycling. This helmet has not been approved and is not intended for extreme uses such as downhill racing at high speeds, jumping or leaping with a fully suspended bicycle, snow sports, water sports, motor sports, street hockey, playground activities, or other activities where face, ear, or greater protection or coverage is desired.
- Always wear a helmet when bicycling. When you get off your bicycle, remove your helmet. Do not wear a helmet while climbing trees, in play areas, on playground equipment, or, at any time while not riding a bicycle. Parents: Instruct children to follow this warning. Failure to follow this warning could result in serious personal injury, death or death by strangulation.

## 2. GETTING STARTED: BLUETOOTH SYSTEM

### 2.1 Downloadable Sena Software

#### 2.1.1 Sena Utility App

By simply pairing your phone with your Bluetooth system, you can use the **Sena Utility App** for quicker and easier set up and management.

- App Features: Music, FM Radio, Device settings, Quick Start Guide, and User's Guide.
- Download
  - Android: Google Play Store > '**Sena Utility**'
  - iOS: App Store > '**Sena Utility**'



#### 2.1.2 Sena Device Manager


The **Sena Device Manager** allows you to upgrade the firmware and configure its settings directly from your PC or Apple computer. Download the **Sena Device Manager** from [sena.com](https://www.sena.com).

[Click Here to Visit sena.com](https://www.sena.com)



## 2.2 Button Function

### Bluetooth System's Buttons

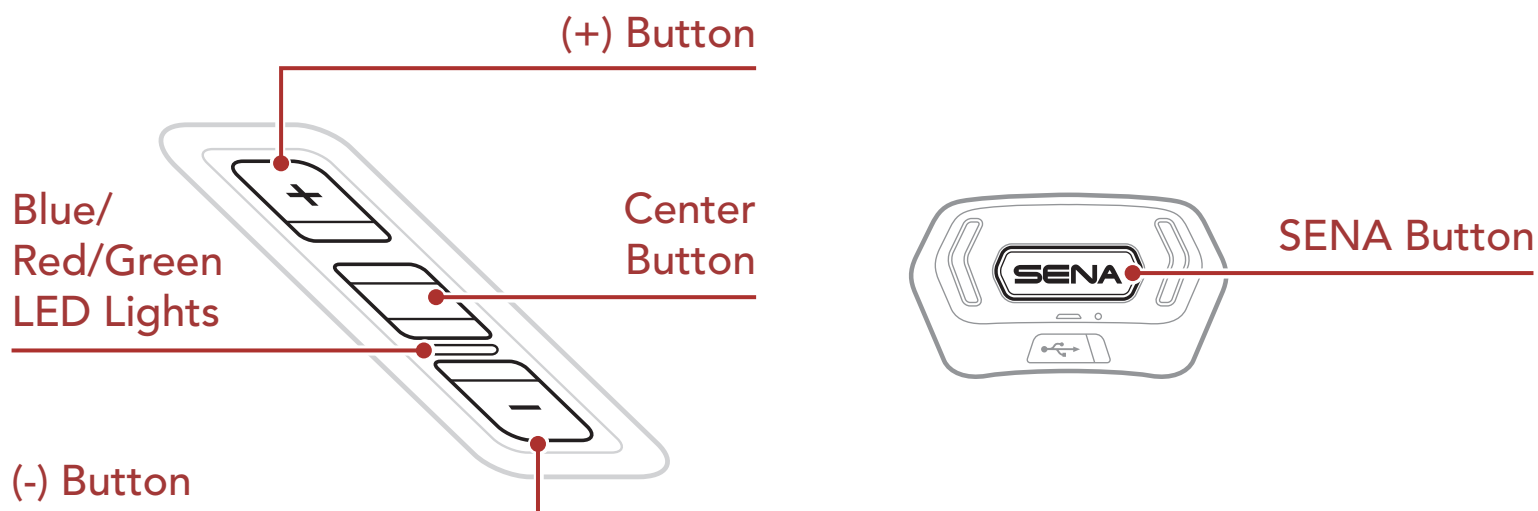


## 2.3 Powering On and Off

### Powering On




### Powering Off

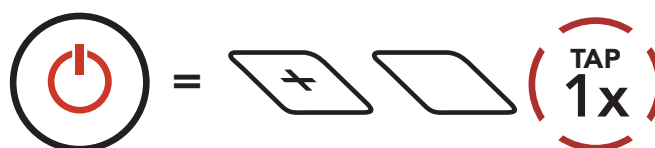

## 2.4 Charging

### Charging the Bluetooth System

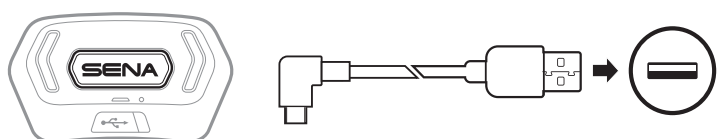

Depending upon the charging method, the Bluetooth system will be fully charged in about 2.5 hours.



#### Note:

- The Bluetooth system includes a **Fast Charging** feature which allows it to charge quickly over a short period of time. For example, a user can get up to 5 hours of talk time after charging the Bluetooth system for 20 minutes.
- Please make sure to take off your helmet while charging. The Bluetooth system automatically turns off during charging.
- Any 3rd party USB charger can be used with Sena products if the charger is approved by either the FCC, CE, IC or other locally approved agencies that Sena accepts.
- The **M1** is compatible with 5 V input USB-charged devices only.


## 2.5 Checking the Battery Level

Instruction is for when powering the Bluetooth system on.

### Visual Method

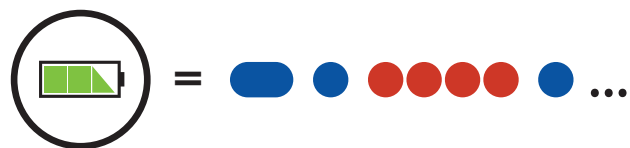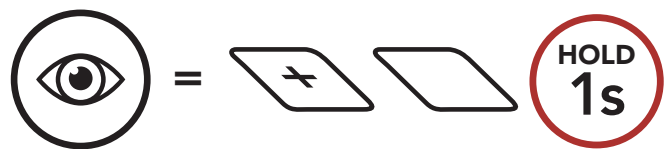

HIGH

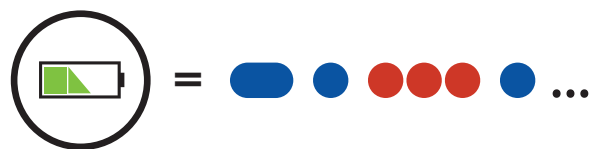

MEDIUM



LOW


#### Note:

- The battery performance may be reduced over time with usage.
- Battery life may vary depending on conditions, environmental factors, functions of the product in use, and devices used with it.


## 2.6 Volume Adjustment

Volume is set and maintained independently at different levels for each audio source, even when the Bluetooth system is rebooted.

### Volume Up

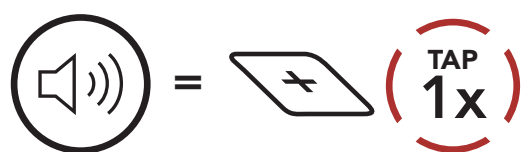

### Volume Down

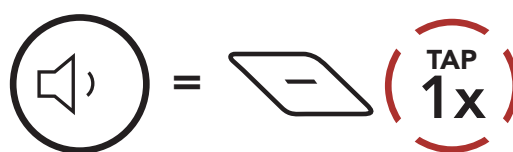



# 3. PAIRING THE BLUETOOTH SYSTEM WITH OTHER BLUETOOTH DEVICES

When using the Bluetooth system with other Bluetooth devices for the first time, they will need to be “paired.” This enables them to recognize and communicate with one another whenever they are within range.

The pairing operation is required only once for each Bluetooth device. The Bluetooth system can pair with multiple Bluetooth devices such as a mobile phone, GPS, or MP3 player via Mobile Phone Pairing and Second Mobile Phone Pairing.

## 3.1 Phone Pairing

There are three ways to pair the phone.



### 3.1.1 Initially Pairing the M1

The Bluetooth system will automatically enter the phone pairing mode when you initially turn on the Bluetooth system or in the following situation:

- Rebooting after executing **Factory Reset**


1. Press and hold the **(+) Button** and **Center Button** for **1 second**.

#### Phone Pairing

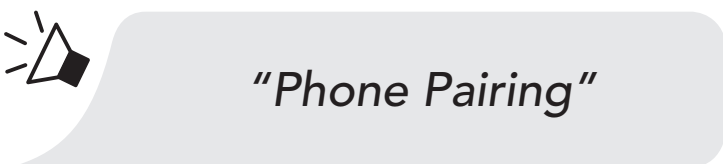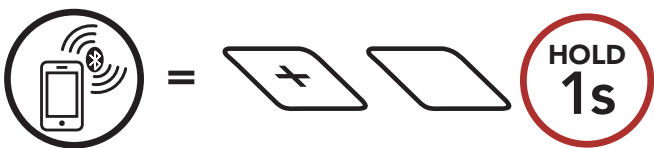

2. With your mobile phone in Bluetooth-pairing mode, select **M1** in the list of devices detected.

3. If your mobile phone asks for a PIN, enter 0000.

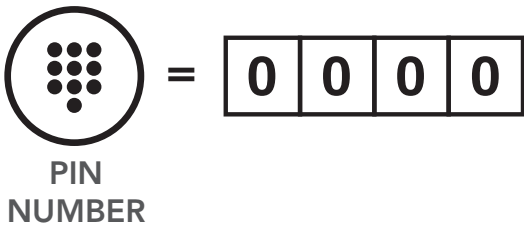


**Note:**

- The phone pairing mode lasts for **3 minutes**.
- To cancel phone pairing, tap the **Center Button**.

### 3.1.2 Pairing When the M1 is Turned Off


1. Press and hold the **(+) Button** and **Center Button** for **5 seconds** when the **M1** is turned off.

**Phone Pairing**

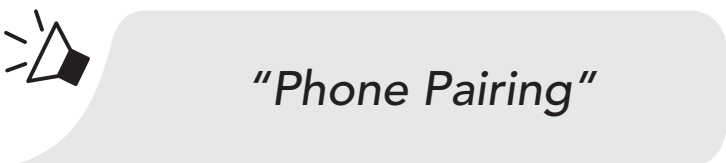

2. With your mobile phone in Bluetooth-pairing mode, select **M1** in the list of devices detected.


3. If your mobile phone asks for a PIN, enter 0000.

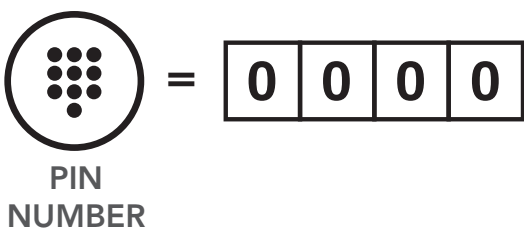

### 3.1.3 Pairing When the M1 is Turned On

1. Press and hold the **Center Button** for **10 seconds** when the **M1** is turned on.

**Phone Pairing**

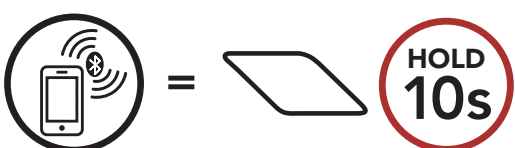




*"Phone Pairing"*



= Alternating blue and red flashing lights indicate **the device is now discoverable**.

2. With your mobile phone in Bluetooth-pairing mode, select **M1** in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

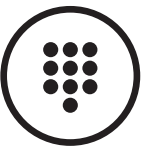

= 

0	0	0	0
---	---	---	---

PIN NUMBER

### 3.2 Second Mobile Phone Pairing - Second Mobile Phone and GPS

1. Execute **Second Mobile Phone Pairing** in the **Configuration Menu**.

#### Second Mobile Phone Pairing



= **HOLD 15s** .....>



= **TAP 1x**



*"Configuration menu"*




*"Second mobile phone pairing"*



= Blue flashing light indicates **the device is now discoverable**.

2. With your mobile phone in Bluetooth-pairing mode, select **M1** in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

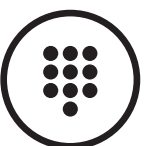

= 

0	0	0	0
---	---	---	---

PIN NUMBER


# 4. MOBILE PHONE USAGE

## 4.1 Making and Answering Calls

### Answer a Call



### End/Reject a Call

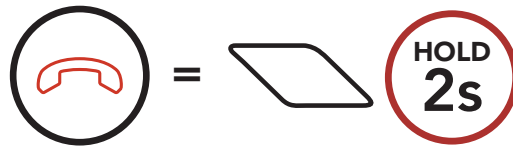

### Make a Call with Voice Dialer




# 5. STEREO MUSIC

## 5.1 Bluetooth Stereo Music


### Play/Pause Music




### Volume Up/Down

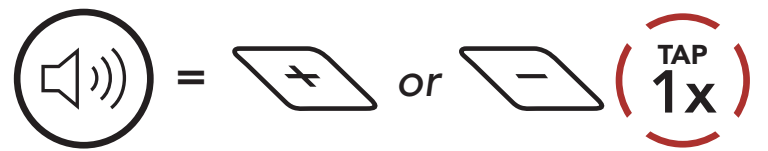

### Next Track

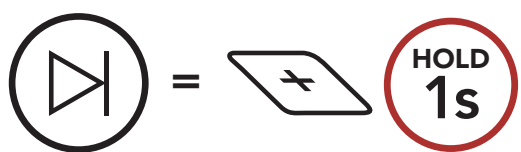


### Previous Track

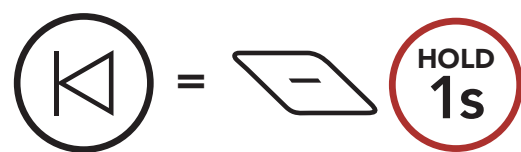

## 6. BLUETOOTH INTERCOM

Up to three other people can be paired with the helmet for Bluetooth intercom conversations.

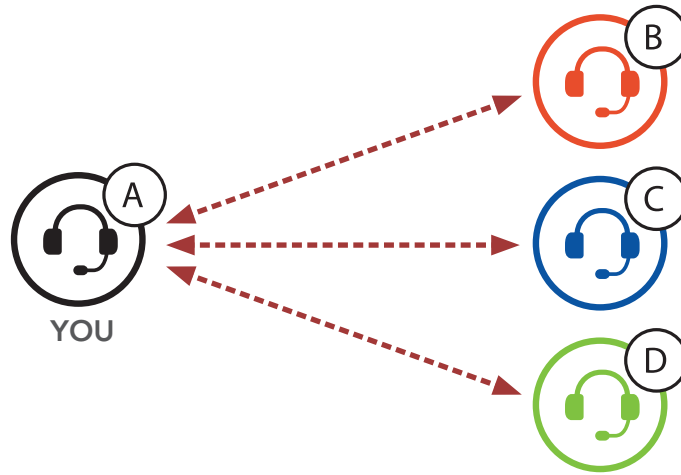


### 6.1 Intercom Pairing

There are two ways to pair the Bluetooth system.

#### 6.1.1 Using the Smart Intercom Pairing (SIP)

**SIP** allows you to quickly pair with your friends for intercom communication by scanning the QR code on the **Sena Utility App** without remembering the button operation.

1. Pair the mobile phone with the Bluetooth system.
2. Open the **Sena Utility App**.
3. Click the **Smart Intercom Pairing Menu**.
4. Click the **Add Button** to open the QR scanning screen.
5. Scan the **QR code** displayed on your friend (**B**)'s mobile phone.
  - Your friend (**B**) can display the QR code on the mobile phone by opening the **Sena Utility App** and clicking the **Smart Intercom Pairing Menu**.

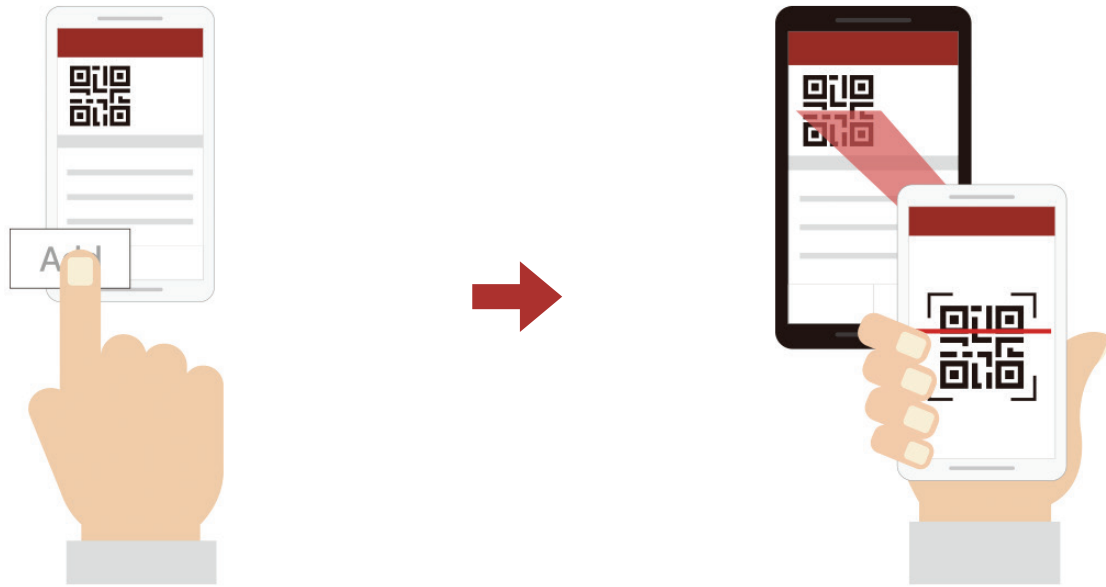


6. Click the **Confirm Button** and check that your friend **(B)** is paired with **you (A)** correctly.
7. Repeat steps 4-6 to pair with **Intercom Friends (C)** and **(D)**.

**Note:** The **Smart Intercom Pairing (SIP)** is not compatible with Sena products that use **Bluetooth 3.0** or **below**.


### 6.1.2 Using the Button

1. Press and hold the **Center Button** of two Bluetooth systems for **5 seconds** until flashes red.
2. Tap the **Center Button** on either Bluetooth system and wait until the LEDs of both turn blue.

#### Pairing with Intercom B

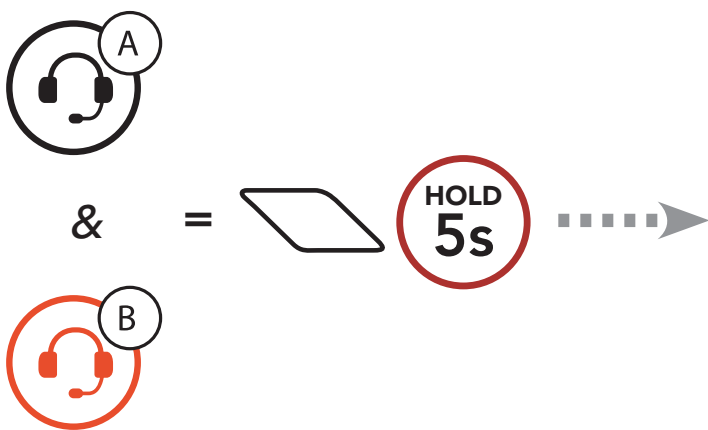


#### On Either One of the Devices

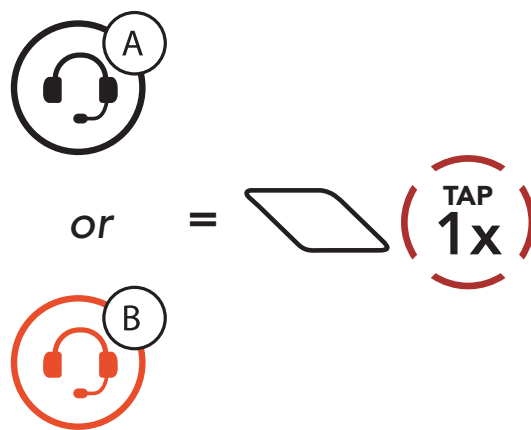

3. Repeat steps 1 and 2 to pair with Intercom Friends C & D.


### Last-Come, First-Served

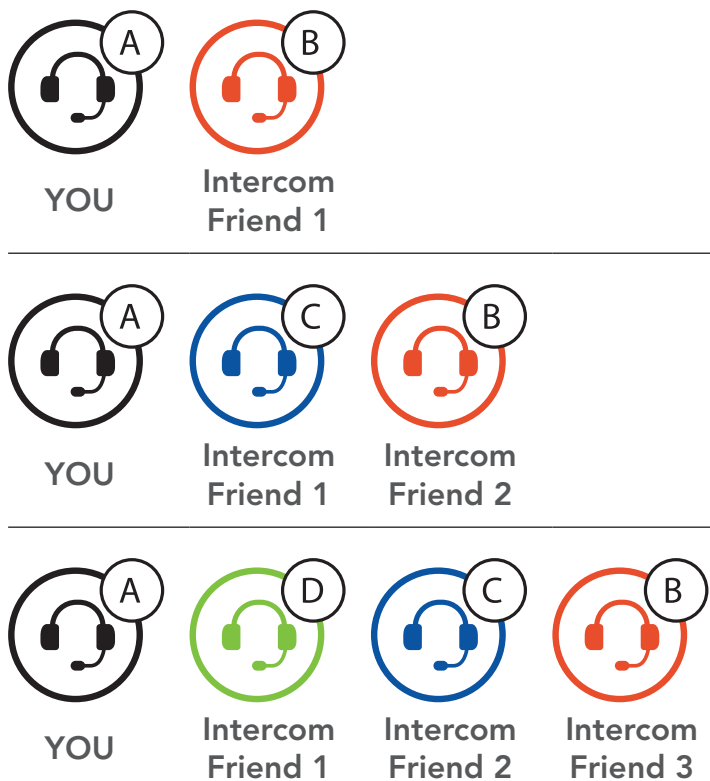

## 6.2 Two-Way Intercom

You can start or end an intercom conversation with an **Intercom Friend** by tapping the **Center Button**.

### Start/End Two-Way Intercom with Intercom Friend 1,2,3

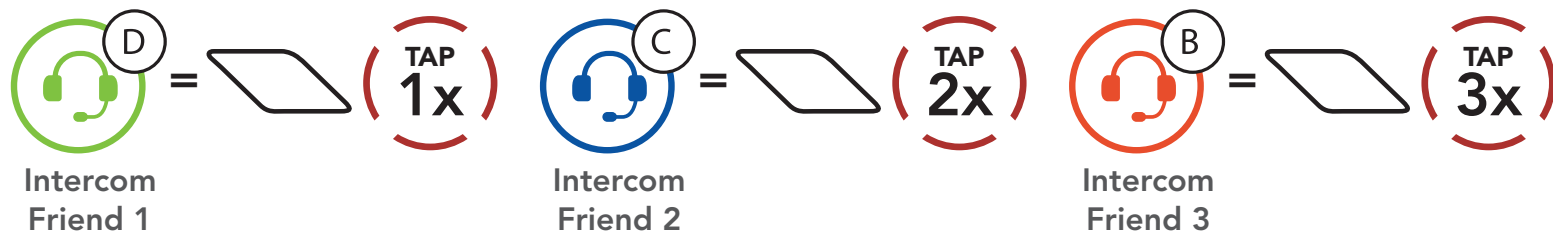

### 6.2.1 HD Intercom

HD Intercom enhances the two-way intercom audio from normal quality to HD quality. when you enter into a multi-way intercom, HD Intercom will be automatically disabled. If this feature is disabled, the intercom audio will change to normal quality.

- HD intercom is only active for two-way intercom.




## 6.3 Multi-Way Intercom

**Multi-Way Intercom** enables conference-call-style conversations with up to **three Intercom Friends** at the same time. While **Multi-Way Intercom** is in progress, mobile phone connection is temporarily disconnected. However, as soon as **Multi-Way Intercom** terminates, the mobile phone connection will be reestablished.

### 6.3.1 Starting a Three-Way Intercom Conference


**You (A)** can have a **Three-Way Intercom Conference** with two other **Intercom Friends (B & C)** by establishing two intercom connections simultaneously.

1. You (A) need to be paired with two other **Intercom Friends (B & C)** for three-way conference intercom.
2. Start an intercom conversation with one of the two friends in your intercom group.
3. You (A) can call the **second Intercom friend (C)** by double tapping the **Center Button**, or the **second Intercom friend (C)** may join the intercom by making an intercom call to you (A).

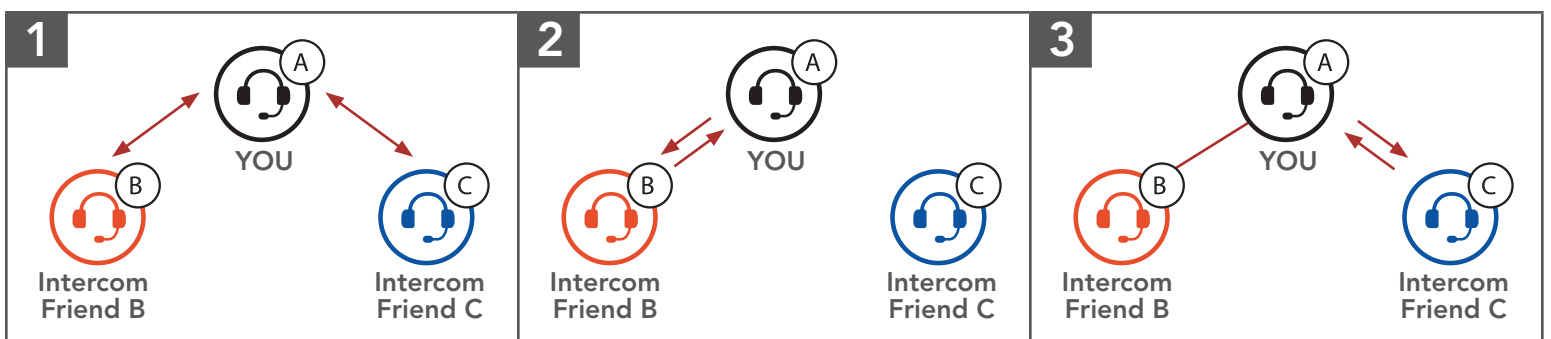

### 6.3.2 Starting a Four-Way Intercom Conference

With **three Intercom Friends** connected, a new participant (**D**) can make it a **Four-Way Intercom Conference** by making an intercom call to either (**B**) or (**C**).

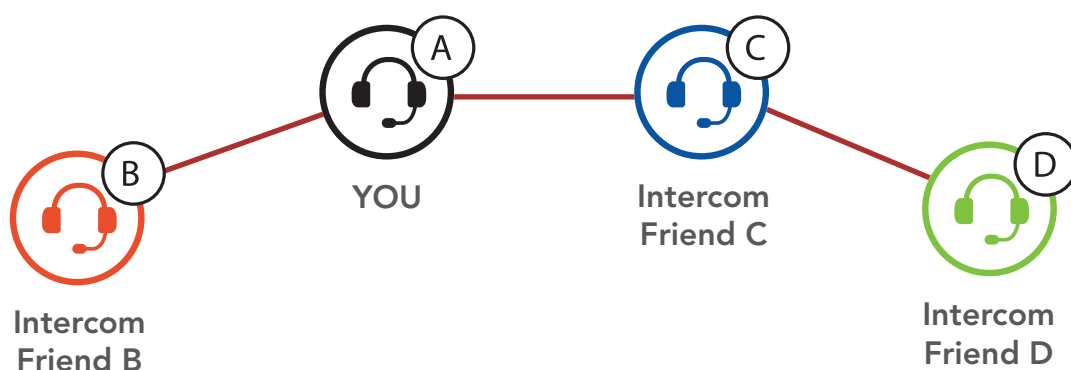


### 6.3.3 Ending Multi-Way Intercom

1. Press and hold the **Center Button** for **1 second** until you hear a beep to terminate all intercom connections.
2. Tap the **Center Button** to disconnect from your **first Intercom Friend**. Double tap the **Center Button** to disconnect from your **second Intercom Friend**.

## 6.4 Three-Way Conference Phone Call with Intercom Users

You can have a **Three-Way Conference Phone Call** by adding an **Intercom Friend** to the mobile phone conversation.


### Invite an Intercom Friend into Phone Conference

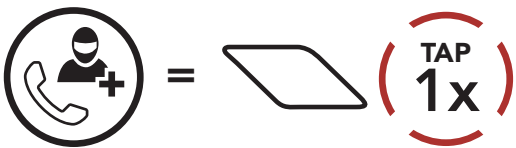

### Disconnect the intercom during a conference phone call



### Disconnect the mobile phone call during a conference phone call

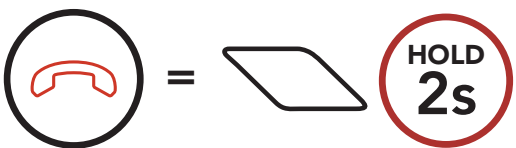

## 6.5 Group Intercom

**Group Intercom** allows you to instantly create a **Multi-Way Conference Intercom** with three of the most recently paired Bluetooth systems.

Go through intercom pairing with up to three people you want in the Group Intercom.

### Start Group Intercom




### Terminate Group Intercom



## 6.6 Universal Intercom


**Universal Intercom** allows you to have intercom conversations with users of non-Sena Bluetooth headsets. You can pair the Bluetooth system with only one non-Sena headset at a time. The intercom distance depends on the performance of the Bluetooth headset to which it's connected. When a non-Sena Bluetooth headset is paired with the Bluetooth system while another Bluetooth device is paired via **Second Mobile Phone Pairing**, it will be disconnected.

1. Access **Universal Intercom Pairing** in the **Bluetooth System Configuration Menu**.

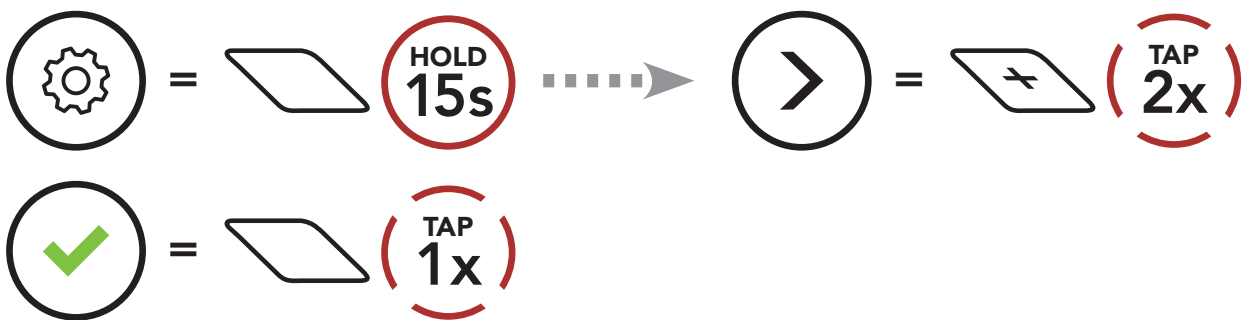


2. Put the non-Sena Bluetooth headset in Pairing Mode. The Bluetooth system will automatically pair with a non-Sena Bluetooth headset.
3. You can have **Two-Way Intercom** or **Multi-Way Intercom** communication with up to three **Intercom Friends** using non-Sena headsets by following the procedures described below.

### Three-Way Universal Intercom

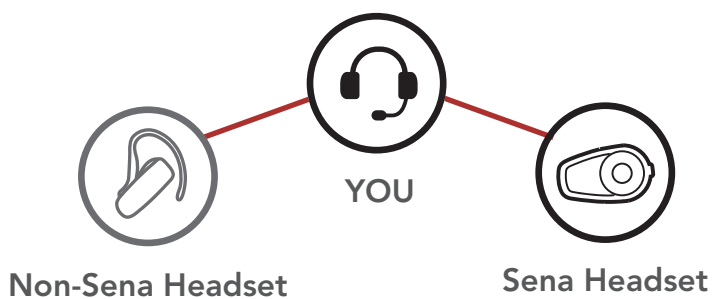

### Four-Way Universal Intercom

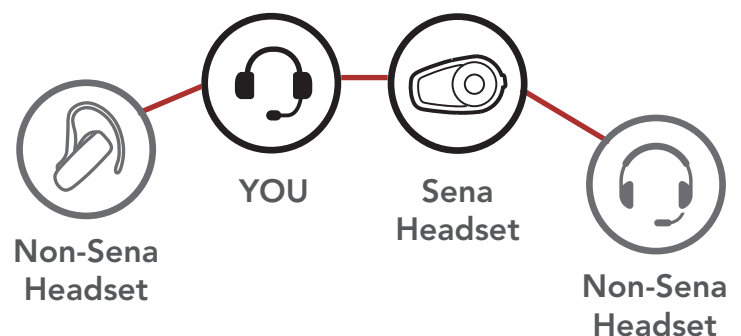


**Note:** Some non-Sena headsets may not support Multi-Way Universal Intercom.


# 7. USING THE FM RADIO

## 7.1 FM Radio On/Off

### FM Radio On

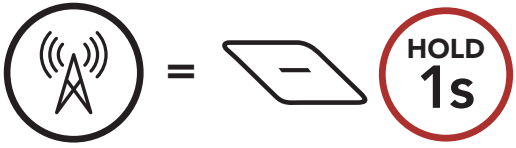

### FM Radio Off

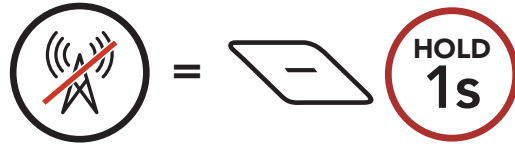


## 7.2 Navigating Preset Stations

### Navigate through Preset Stations



## 7.3 Seek and Save Radio Stations

### Seek Stations Forward

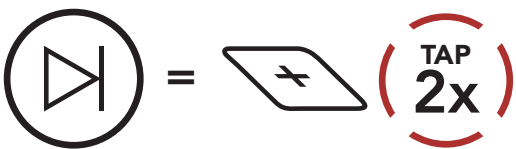

### Seek Stations Backward




### Save Stations


You can save current station from the **Sena Device Manager** or the **Sena Utility App**.

## 7.4 Scan and Save Radio Stations

### Start Scanning

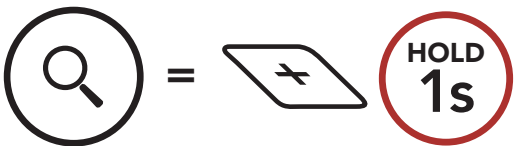

### Stop Scanning

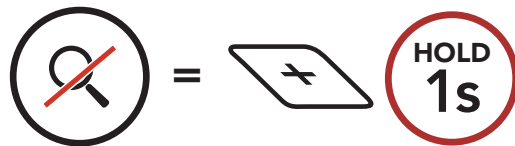


### Save Stations

You can save current station from the **Sena Device Manager** or the **Sena Utility App**.

## 7.5 Temporary Station Preset

The **Temporary Preset** feature automatically finds and saves the nearest 10 radio stations without changing your existing preset stations. The temporary preset stations will be cleared when the Bluetooth system reboots.

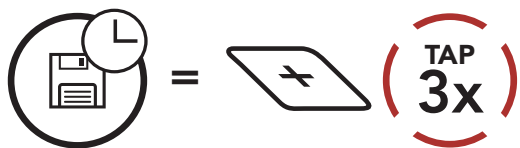

## 7.6 Region Selection

You can select the proper FM frequency range for your location from the **Sena Device Manager** or the **Sena Utility App**. Using the region setting, you can optimize the seek function to avoid unnecessary frequency ranges.

Region	Frequency range	Step
Worldwide	76.0 ~ 108.0 MHz	± 100 kHz
North America, South America and Australia	87.5 ~ 107.9 MHz	± 200 kHz
Asia and Europe	87.5 ~ 108.0 MHz	± 100 kHz
Japan	76.0 ~ 95.0 MHz	± 100 kHz

## 8. LED TAILLIGHT

There is a Red LED on the back of the helmet to ensure you stand out on the road.

### 8.1 Using the SENA Button

#### LED On and Solid



#### Night Flash



#### Day Flash



#### LED Off



**Note:** Do not tap the button continuously.

# 9. FUNCTION PRIORITY AND FIRMWARE UPGRADES

## 9.1 Function Priority

The Bluetooth system operates in the following order of priority:

- (highest)** Mobile phone
- Bluetooth Intercom
- FM radio
- (lowest)** Bluetooth stereo music

A lower priority function is always interrupted by a higher priority function.

## 9.2 Firmware Upgrades


The Bluetooth system supports firmware upgrades. You can upgrade the firmware using the **Sena Device Manager**. Please visit **sena.com** to check for the latest software downloads.

[Click Here to Visit sena.com](https://www.sena.com)



# 10. CONFIGURATION SETTING

## 10.1 Bluetooth System Configuration Menu


### Accessing the Configuration Menu

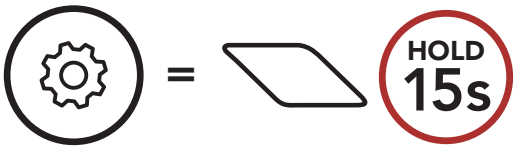

### Navigating Between Menu Options

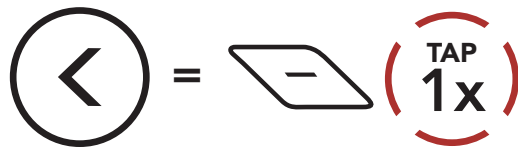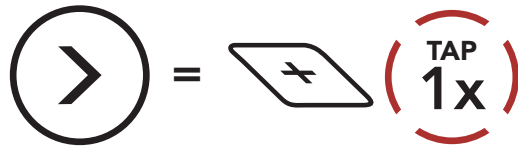

### Execute Menu Options

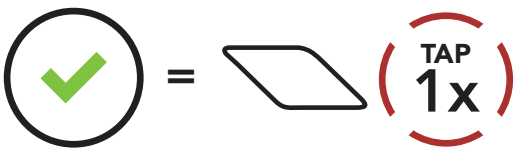

### Bluetooth System Configuration Menu

Voice Configuration Menu	Tap the Center Button
Second Mobile Phone Pairing	None
Universal Intercom Pairing	Execute
Factory Reset	Execute
Exit Configuration	Execute



## 10.2 Software Configuration Setting

You can change the settings of the Bluetooth system through the **Sena Device Manager** or the **Sena Utility App**.

### 10.2.1 Unit Language

You can select the device language. The selected language is maintained even when the Bluetooth system is rebooted.

### 10.2.2 Voice Prompt (Default: Enable)

You can disable voice prompts by software configuration settings, but the following voice prompts are always on.

- Bluetooth system configuration settings menu, battery level indicator, FM radio functions

### 10.2.3 RDS AF Setting (Default: Disable)

**Radio Data System (RDS) Alternative Frequency (AF) Setting** allows a receiver to re-tune to the second frequency location when the first signal becomes too weak. With RDS AF enabled on the receiver, a radio station with more than one frequency can be used.

### 10.2.4 FM Station Guide (Default: Enable)

When **FM Station Guide** is enabled, FM station frequencies are given by voice prompts as you select preset stations. When **FM Station Guide** is disabled, the voice prompts on FM station frequencies will not be given as you select preset stations.

### 10.2.5 Sidetone (Default: Disable)

**Sidetone** is audible feedback of your own voice. It helps you to naturally speak at the correct level according to varying helmet noise conditions. If this feature is enabled, you can hear what you are speaking during an intercom conversation or a phone call.

### 10.2.6 Advanced Noise Control™ (Always on)


The background noise is reduced during an intercom conversation.

# 11. TROUBLESHOOTING

## 11.1 Fault Reset


When the Bluetooth system is not working properly, you can easily reset the unit:

1. Locate the **pinhole reset button** below Sena logo at the back side of the helmet.
2. Gently insert a paper clip into the hole and press and **Fault Reset Button** for **1 second** with light pressure.

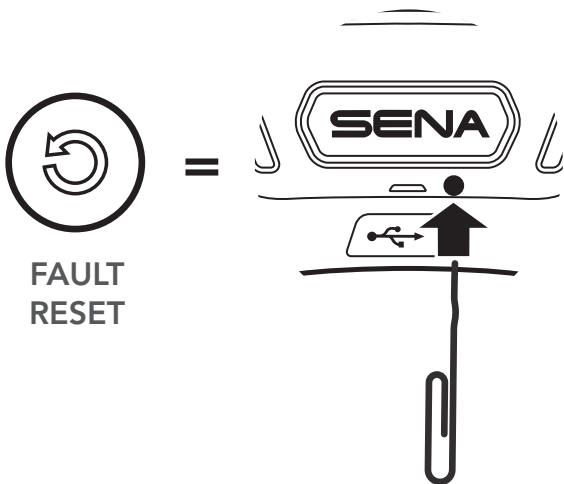

## 11.2 Factory Reset

To erase all of your settings and start fresh, the system can be restored to factory default settings using the **factory reset**.

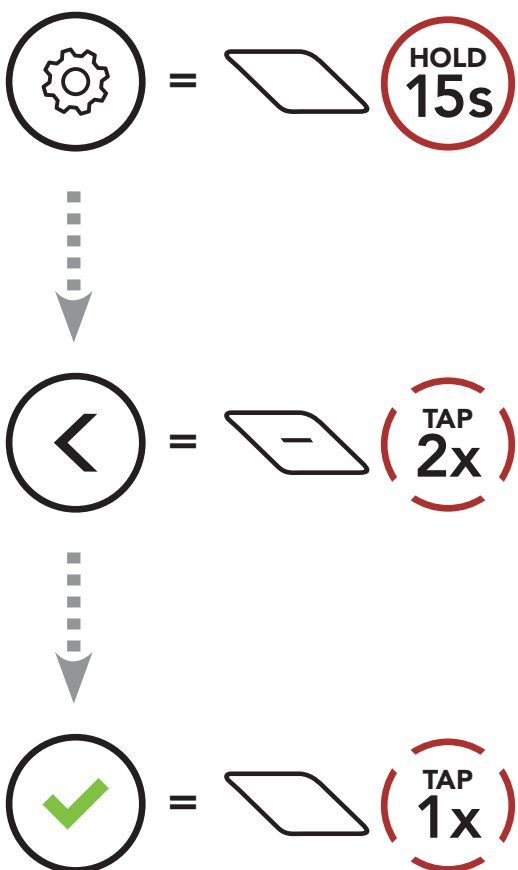

## 12. MAINTENANCE AND CARE

The inner lining of the helmet is completely removable. Its headliner can be washed by hand using only water, mild soap, at a maximum temperature of 30°C (86°F), and non-abrasive cloths to clean the helmet's shell, pads and retention system. Allow the padding to dry at room temperature. Store the helmet in a dry, dark, well-ventilated location, out of the reach of children and animals. High temperatures (above 110°F, 43°C) may melt the helmet's shell.

### WARNING

- Never use gasoline, diesel fuel, thinners or solvents to clean the helmet. These substances can cause serious damage to the helmet, even though the resulting damage may not be visible. This helmet can be damaged by contact with common substances (for example, certain solvents (ammonia), cleaners (bleach), paints, abrasives) and this damage may not be visible to the wearer. Do not use this helmet if it has been exposed to such substances. The full safety function of the helmet can no longer be guaranteed if exposed to damaging substances.
- Do not store your helmet in your car or anywhere else near a heat source. Do not use if the shell has been melted or deformed. Always position the helmet so that it cannot fall to the floor. Damage that occurs in this way is not covered by the warranty.
- Do not attach anything to your helmet, including mirrors or lights.

The shell of this helmet is constructed of expanded polystyrene foam. Ventilation holes may allow harmful objects to pass in the helmet interior.

The protective capability of your helmet will diminish over time, dependent upon many factors such as dents, dings, and exposure to pollution, harmful chemicals and long term exposure to the sun. Sena recommends that helmets be replaced after five years.

**Note:** The useful life of your helmet may be less than five years as a result of exposure to sunlight, rough, handling/storage that results in dents or cuts or as a result of heavy use.



Copyright © 2021 Sena Technologies, Inc.  
All rights reserved.

© 1998–2021 Sena Technologies, Inc. All rights reserved.

Sena Technologies, Inc. reserves the right to make any changes and improvements to its product without providing prior notice.

Sena™ is a trademark of Sena Technologies, Inc. or its subsidiaries in the USA and other countries. SF1™, SF2™, SF4™, SFR™, SRL™, Momentum™, Momentum INC™, Momentum Lite™, Momentum Pro™, Momentum INC Pro™, Momentum EVO™, Cavalry™, Latitude SR™, Latitude SX™, Latitude S1™, 30K™, 33i™, 50S™, 50R™, 5S™, 20S EVO™, 20S™, 10S™, 10C™, 10C PRO™, ProRide EVO™, 10C EVO™, 10U™, 10Upad™, 10R™, 3S™, 3S PLUS™, SMH5™, SMH5-FM™, SMH5 MultiCom™, SMH10™, SMH10R™, SPH10™, SPH10H-FM™, Savage™, Prism Tube WiFi™, Prism™, Bluetooth Audio Pack for GoPro®, R1™, R1 EVO™, R1 EVO CS™, M1™, M1 EVO™, RUMBA™, RC1™, RC3™, RC4™, Handlebar Remote™, Wristband Remote™, PowerPro Mount™, Powerbank™, FreeWire™, WiFi Docking Station™, WiFi Sync Cable™, WiFi Adapter™, +mesh™, +Mesh Universal™, MeshPort Blue™, MeshPort Red™, Econo™, OUTRUSH™, OUTRUSH R™, OUTSTAR™, EcoCom™, Parani A10™, Parani A20™, Parani M10™, pi™, Snowtalk™, Snowtalk2™, SR10™, SR10i™, SM10™, SPIDER RT1™, SPIDER ST1™, X1™, X1 Pro™, X1S™, Expand™, Expand Boom™, Bluetooth Mic & Intercom™, Tufftalk™, Tufftalk Lite™, Tufftalk M™ are trademarks of Sena Technologies, Inc. or its subsidiaries. These trademarks may not be used without the express permission of Sena.

GoPro® is a registered trademark of Woodman Labs of San Mateo, California. Sena Technologies, Inc. ("Sena") is not affiliated with Woodman Labs, Inc. The Sena Bluetooth Pack for GoPro® is an aftermarket accessory specially designed and manufactured by Sena Technologies, Inc. for the GoPro® Hero3 and Hero4 allowing for Bluetooth capabilities.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. iPhone® and iPod® touch are registered trademarks of Apple Inc.

Address: 152 Technology Drive Irvine, CA 92618